




U-Rx™ CARRIER




Installation Instructions

ESS CROSSBOW™ / ICE™ / ICE NARO™


STEP 1: Center the outer slot of the U-Rx nose piece on the lens. Push nose piece up with thumb until it snaps into position.

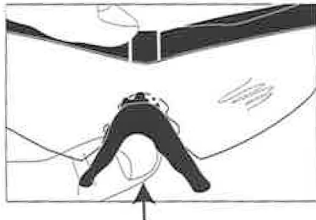

STEP 2: Center the U-Rx Carrier and slide it into the nose piece slot.

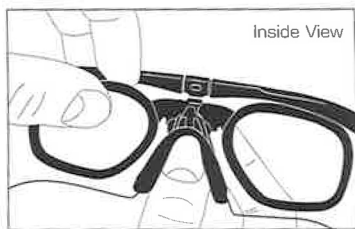



STEP 3: Push Retaining Tab forward to lock U-Rx Carrier into place.

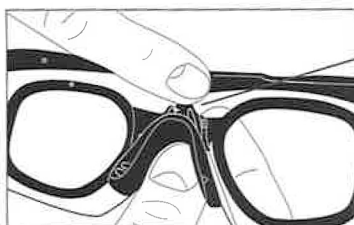

Retaining Tab

ESS PROFILE NVG™ GOGGLES



STEP 1: Remove goggle lens from frame. Locate vent holes on inside of the frame: Under logo, row closest to lens groove, 2nd from center.

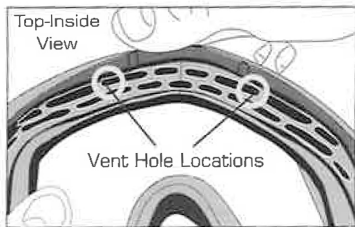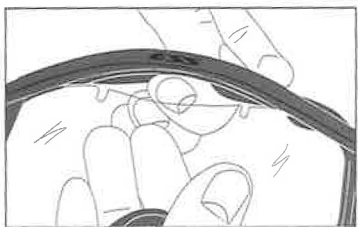

Top-Inside View


Vent Hole Locations

STEP 2: Starting with one side, CAREFULLY engage the Goggle Adapter Retaining Arms into the goggle's vent holes. Take care to not tear the vent foam.

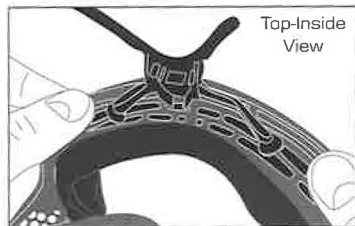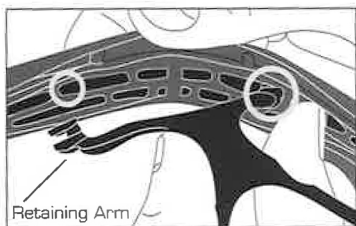

Top-Inside View

STEP 3: Ensure that Retaining Arms are engaged in the goggle vent holes and centered in the goggle. Slide the nose arc of the Goggle Adapter over the goggle's nose bridge.

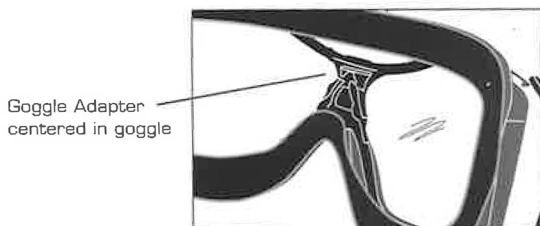


Inside View

Goggle Adapter centered in goggle

STEP 4: Re-install the goggle lens into goggle frame.

STEP 5: Slide the Rx Carrier into the Goggle Adapter and push the Retaining Tab forward to lock the U-Rx Carrier into place.

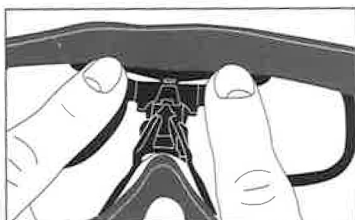

Retaining Tab

Eye Safety Systems, Inc.
PO Box 1017
Sun Valley, ID 83353 U.S.A.

Toll Free: 877.726.4072
International: +1.208.726.4072
www.esseyepro.com



©2010 Eye Safety Systems, Inc.



UNIVERSAL RX CARRIER INSTALLATION INSTRUCTIONS

SI BALLISTIC M-FRAME 2.0

STEP 1: Insert the right side into the lens notch ensuring complete engagement. Holding the center bridge, push the nose piece up into place.


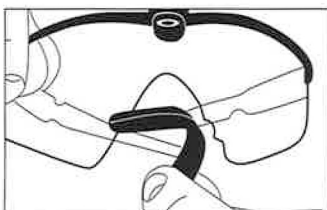
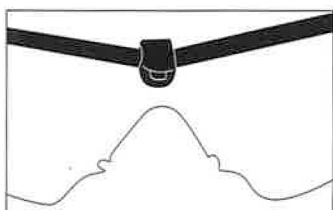


STEP 2: Slide the Rx Carrier into place and push the thumb tab forward ensuring it snaps over the Rx Carrier.




SI BALLISTIC GOGGLE

STEP 1: Unsnap the top three lens frame snaps from the lens. Clip the Rx Carrier Hanger hooks around the center post of the goggle frame.

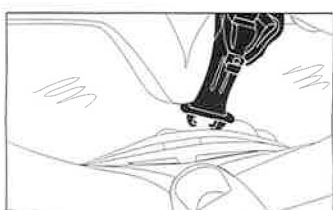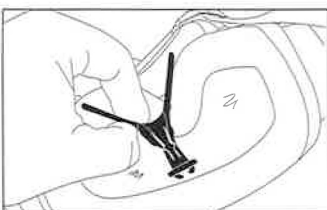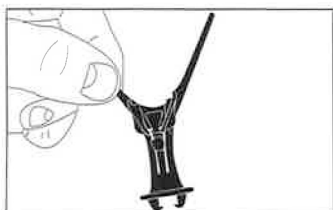

STEP 2: Place the nose arc of the Hanger over the goggle nose bridge.

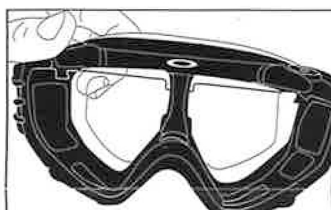

STEP 3: Snap goggle lens back into place.



STEP 4: Slide the Rx Carrier into place depressing the thumb tab forward.

Release the thumb tab when the Rx Carrier is fully engaged at the lowest point of the hanger.

