Quick Fist GO-BETWEEN Rubber Clamp

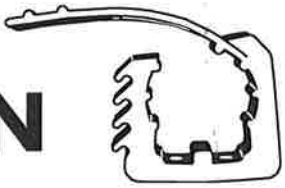

Installation Instructions:

1. Mount with two 1/4" fine thread screws or bolts and washers (under the bolt or screwhead). Do not over-tighten, as the rubber just spreads.
2. The strap can be mounted with it facing in any direction.
3. To clamp: put a tool or implement into the jaws and push the strap to the desired tightness.

Made in USA

End of the Road, Inc
2212 Dortch Ave.
Nashville, TN 37210, USA
www.endroad.com

ITEM #80011

U.S. and world wide patents pending
UK patent 2403262