PACFIRE

MSA BRISTOL COMPOSITE GLOVES
SIZING GUIDE

MSA BRISTOL COMPOSITE GLOVES SIZING CHART

	SIZE 5-XXXS	SIZE 6-XXS	SIZE 7-XS	SIZE 8-S	SIZE 9-M
A	150-160	160-170	170-180	180-190	190-200
B	150-160	160-170	170-180	180-190	190-200

	SIZE 10-L	SIZE 11-XL	SIZE1 12-XXL	SIZE 13-XXXL	SIZE 14-XXXXL
A	200-210	210-220	220-230	230-240	240-250
B	200-210	210-220	220-230	230-240	240-250

A. Hand length (in mm)
take this measurement from the palm side of the hand

B. Hand circumference (in mm)
measured 20mm above the thumb crotch

INSTRUCTIONS

1. Using a tape measure, measure the distance between the tip of your longest finger and wrist. Take this measurement from the palm side of the hand.

2. Then measure the distance around your hand (circumference), take the measurement 20mm above the crotch of your thumb.

3. Record your measurements and using the tables find your size for the Bristol Composite Structural Firefighting Gloves.

		MEASUREMENT *(in mm)*
A	Hand Length	
B	Hand Circumference	
	MY GLOVE SIZE IS:	

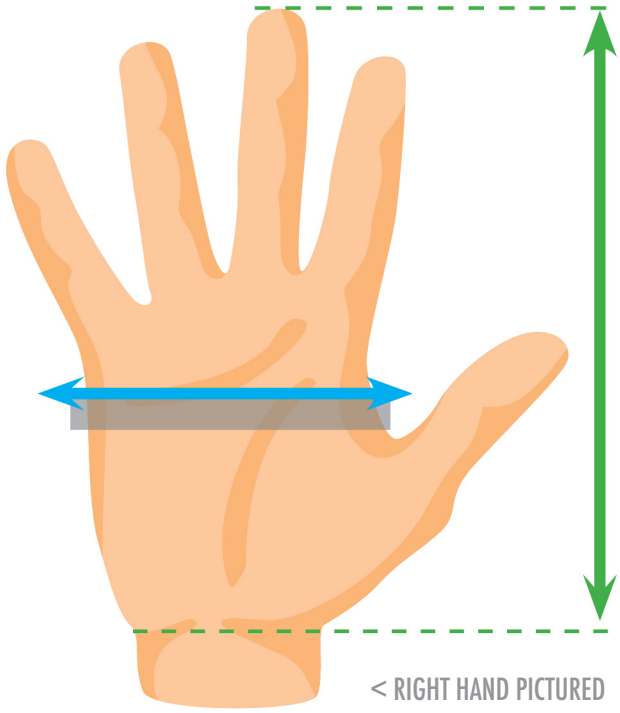

< RIGHT HAND PICTURED